



How to mark your ballot using Verity Touch Writer

Use one of the following tools:

Move wheel and **Select** button



Tactile switches
(or your sip-and-puff)



Touch screen



Note: If you want to listen to instructions and ballot choices, use headphones or a neckloop.

1 If multiple languages are available, select one.



2 Enter your access code and select **Accept**.



3 When you're ready, select **Begin Voting**.




4 Select each choice; then select **Next** to move to the next contest.



5 Review your ballot. When you're ready, select **Print**.



6 Select **Yes, print my ballot**.

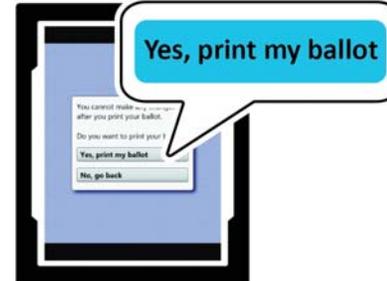

7 Retrieve your ballot from the printer.

